## Bell System (BSTL) 500 Series







#### Terminals

- I Call
- R Speech Out (Mic)
- O Common
- T Speech In (Speaker)
- Z Lock
- V + 12VDC
- L Door Contact

#### **IMPORTANT NOTE :**


1) Before replacing the handset make note of the wires to each terminal on the existing unit (an easy way is to cut each core off leaving a piece of the insulation in place with colour visible) twist unused cores together (so you know they are not used, <u>do not</u> short them out).

2) Some older systems will have cable with one coloured core and a solid white core in this case mark each core with a marker or tape.


3) Some systems may have <u>loop on wiring</u>, you will have 2 cables into your handset (make sure any joins remain, as these may be serving other flats on the system).

© 2013 www.interfoni.rs

# Wiring Diagram Single Entrance DC Call

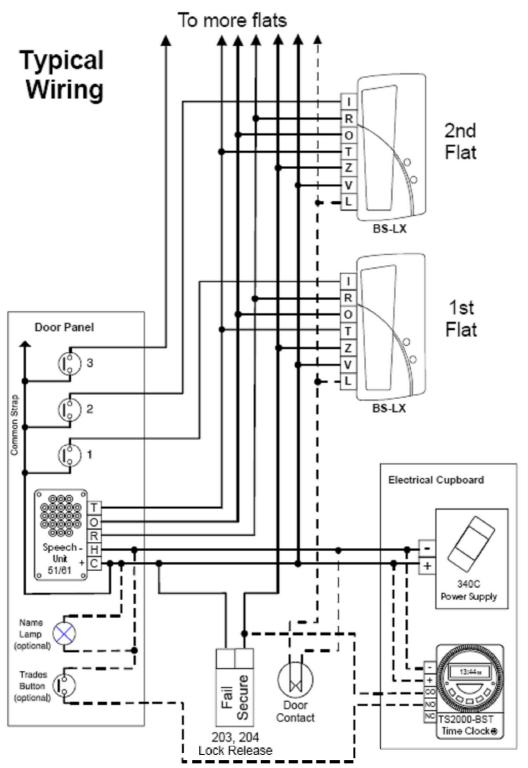

## Wiring Diagram 2 Entrance DC call with 59S Switcher

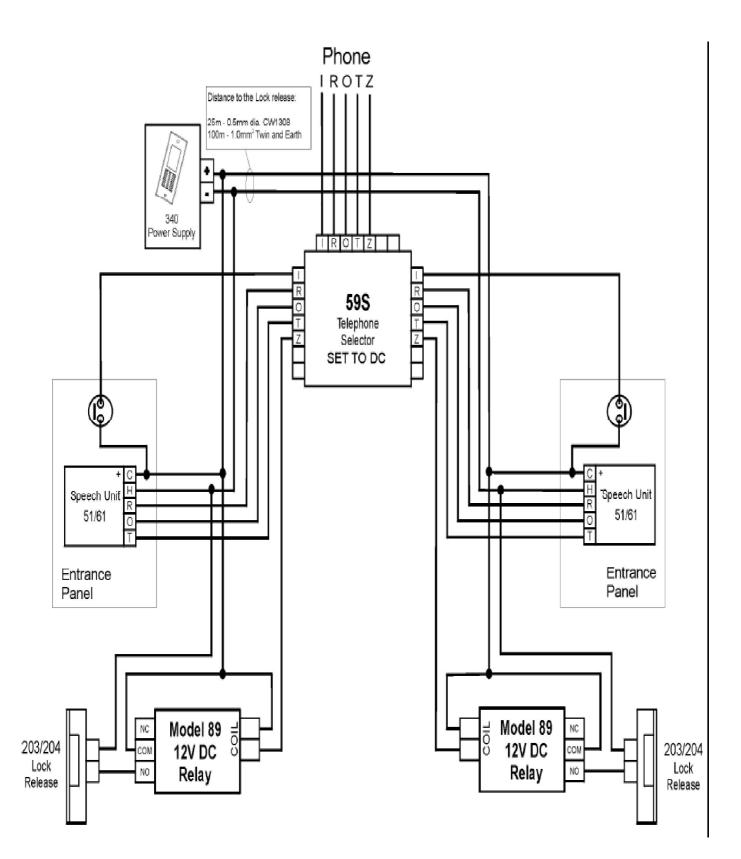

#### Wiring Diagram 2 Entrance System DC Call (M719S Switcher)

