

# Bell System (BSTL) BS-LX



## Terminals

- I Call
- R Speech Out (Mic)
- O Common
- T Speech In (Speaker)
- Z Lock
- V + 12VDC
- L Door Contact

### **IMPORTANT NOTE :**

1) Before replacing the handset make note of the wires to each terminal on the existing unit (an easy way is to cut each core off leaving a piece of the insulation in place with colour visible) twist unused cores together (so you know they are not used, do not short them out).

2) Some older systems will have cable with one coloured core and a solid white core in this case mark each core with a marker or tape.


3) Some systems may have loop on wiring, you will have 2 cables into your handset (make sure any joins remain, as these may be serving other flats on the system).

# Setting Handset Up

## BS-LX 12V DC Audio Phone

### DIP Switch Settings

Ring Type(1)		Ringer Mute Times(5,6,7,8)	
[1] Min. Period		[5678] No Mute	[5671] 1 hour
[0] Short		[T678] 2 mins	[T671] 2 hour
Door Monitor(2)		[5y78] 5 mins	[5Y71] 4 hour
[2] N/C		[TY78] 10 mins	[TY71] 5 hour
[W] N/O		[56U8] 15 mins	[56U1] 6 hour
Unlock Time(3,4)		[T6U8] 20 mins	[T6U1] 8 hour
[er] 1S	[E4] 3S	[5YU8] 30 mins	[5YU1] 10 hour
[3R] 5S	[34] 10S	[TYU8] 45 mins	[TYU1] Toggle

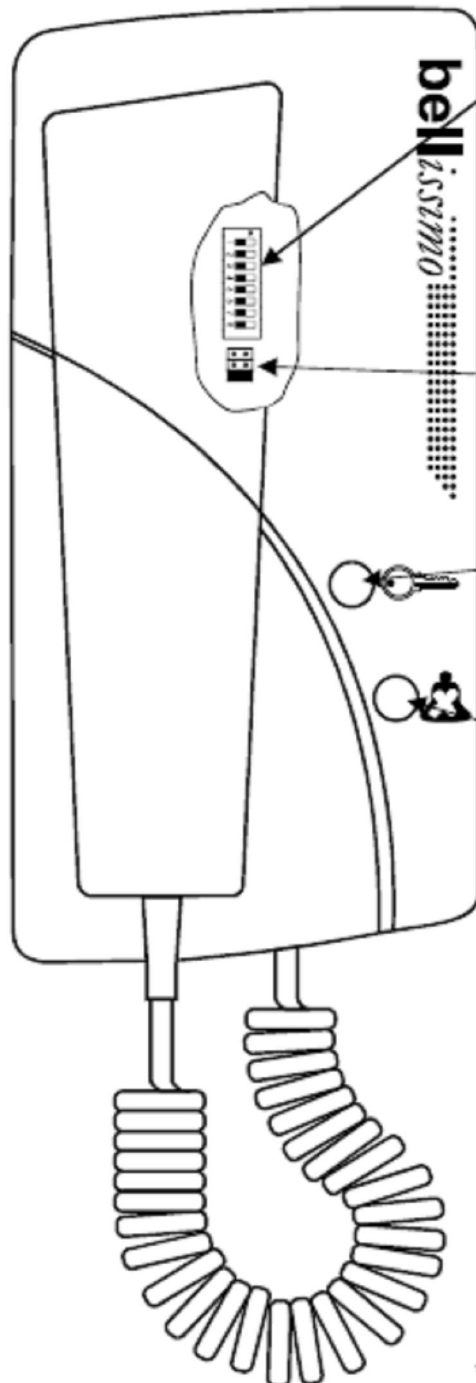

Ring Volume (3 Levels)

Unlock button  
and Door Status Indicator  
(green)

Buzzer Mute button  
and Ring Status Indicator  
(red)

**Compatible with\***  
500X,500PX,500XT,  
500LX,500PLX,500PLXT  
Phones


\*Assumes recommended cable  
type and distances.

**bell**  
system

PD-123 Issue 1

# Wiring Diagram

## Single Entrance DC Call

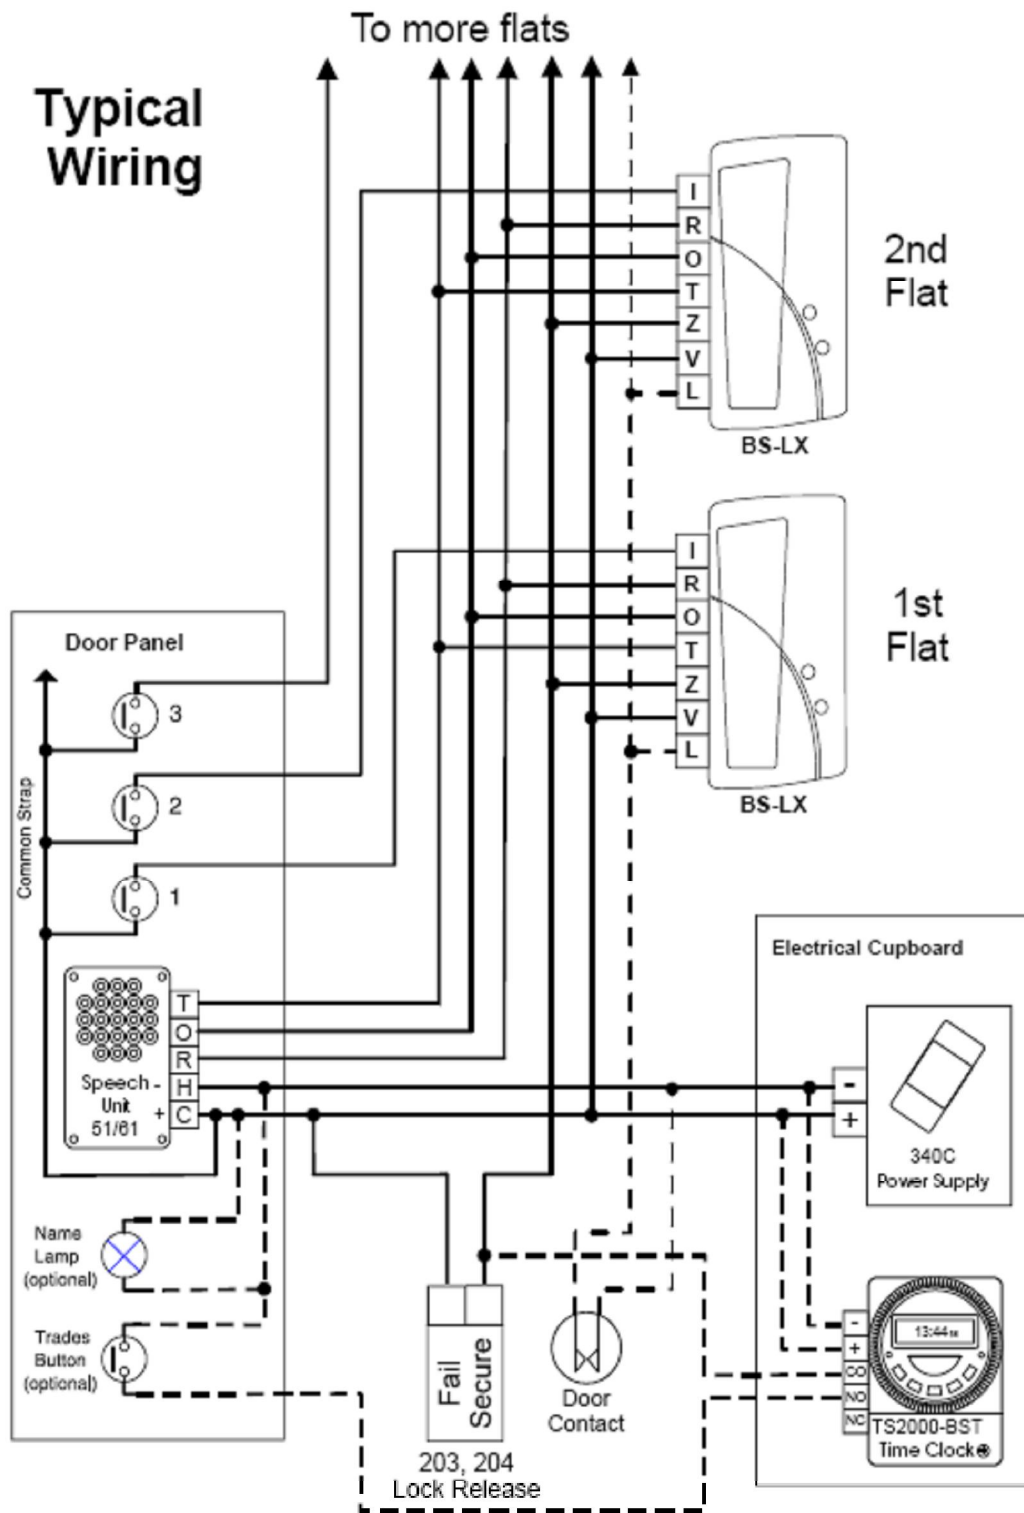

# Wiring Diagram

## 2 Entrance DC call with 59S Switcher

