


# ELVOX 801 Series

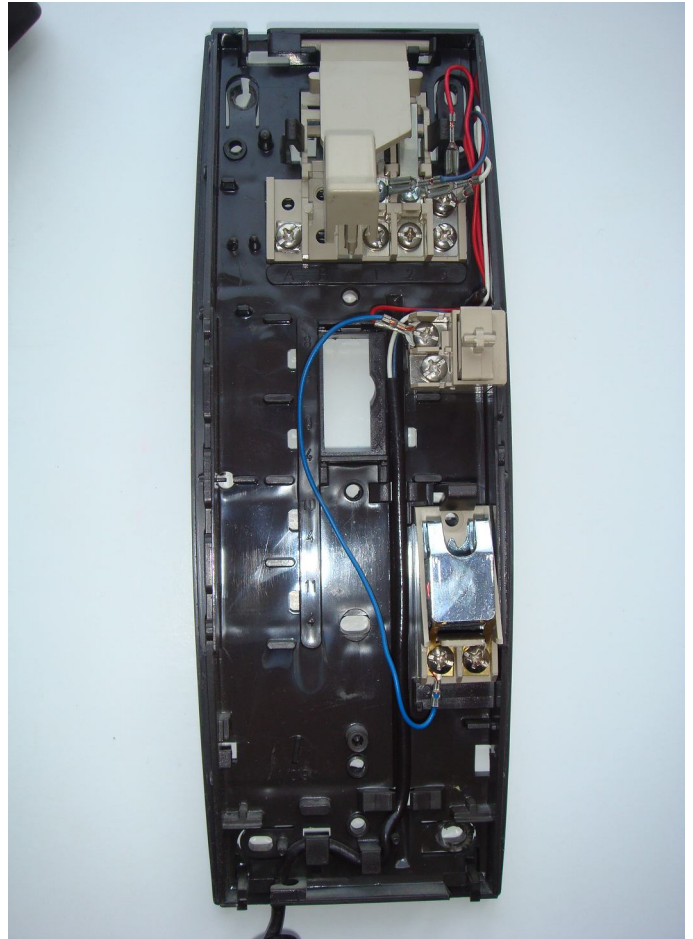

## Terminals

B

- 1 Speech In (Speaker)
- 2 Speech Out (Mic)
- 3 Common ([linked to 4/5](#))
- 6 Call
- 7 Lock

### IMPORTANT NOTE :


1) Before replacing the handset make note of the wires to each terminal on the existing unit (an easy way is to cut each core off leaving a piece of the insulation in place with colour visible) twist unused cores together (so you know they are not used, do not short them out).

2) Some older systems will have cable with one coloured core and a solid white core in this case mark each core with a marker or tape.

3) Some systems may have loop on wiring, you will have 2 cables into your handset (make sure any joins remain, as these may be serving other flats on the system).

# WIRING DIAGRAM

## ELVOX 801 Handset to 1 Entrance Panel

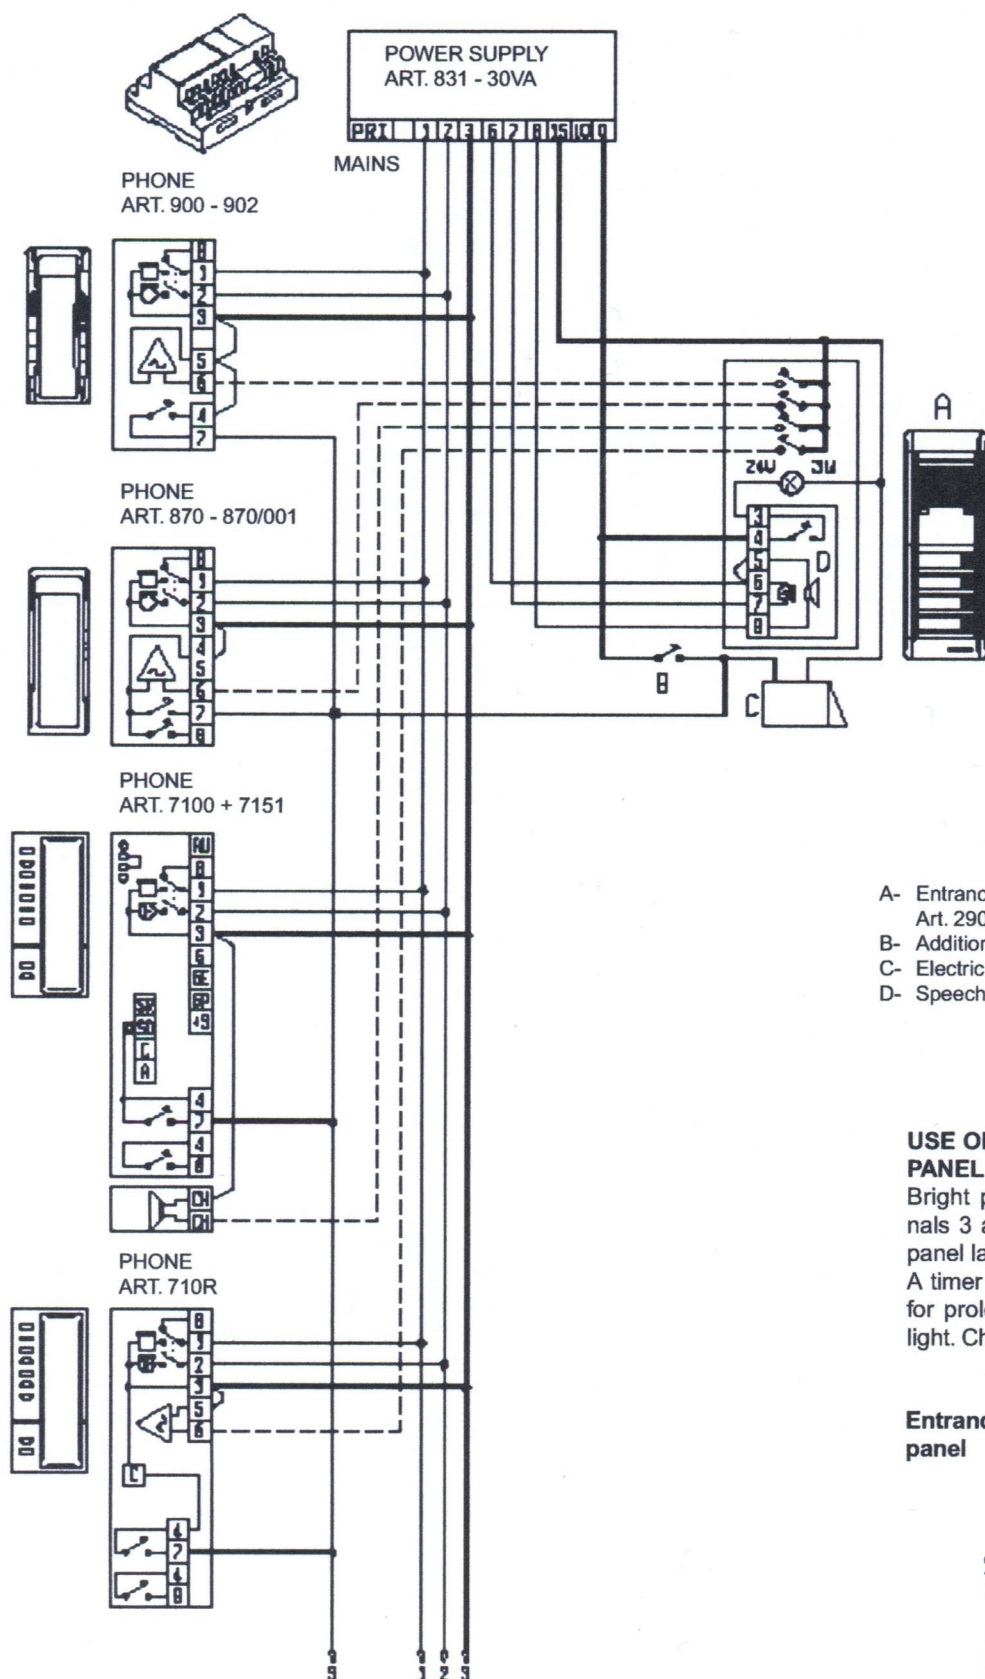


- A- Entrance panel with speech unit  
Art. 2900-2970-2990-3200 and series 9000
- B- Additional push-button for lock
- C- Electric lock 12V A.C.
- D- Speech unit Art. 930

### USE OF BRIGHT PUSH-BUTTON FOR PANEL LIGHTING

Bright push-button connected to terminals 3 and 4 may be used to switch on panel lamps as per diagram.

A timer may be used for switching on or for prolonged switching on or for stair-light. Charge 0.5A - 24V AC max.

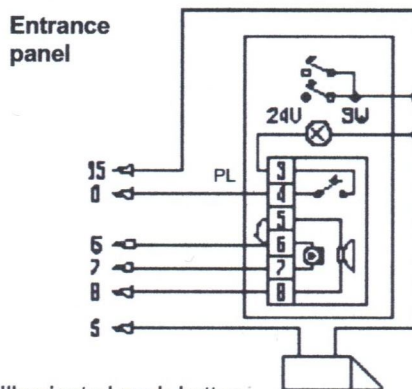


PL- Illuminated push-button



# WIRING DIAGRAM

## ELVOX 831 PSU with 2 Entrance Panels




ALIMENTATORE  
POWER SUPPLY  
ALIMENTATION  
NETZGERÄT  
ALIMENTADOR

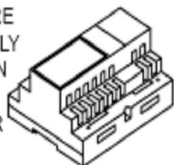


RETE-NETWORK  
RÉSEAU-NETZ  
RED-REDE

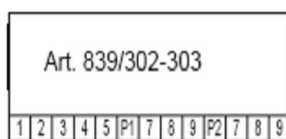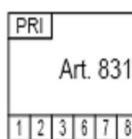

 COMMUTATORE  
SWITCHING MODULE  
COMMUTATEUR  
UMSCHALTRELAIS  
CONMUTADOR  
COMUTADOR

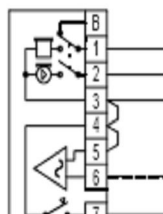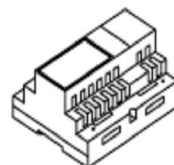


 CITOFONI - INTERPHONE  
POSTES - HAUSTELEFONE  
TELÉFONOS - TELEFONES  
ART. 620R



CITOFONI - INTERPHONE  
POSTES - HAUSTELEFONE  
TELÉFONOS - TELEFONES  
ART. 8870 - 870/001

1 2 3 S

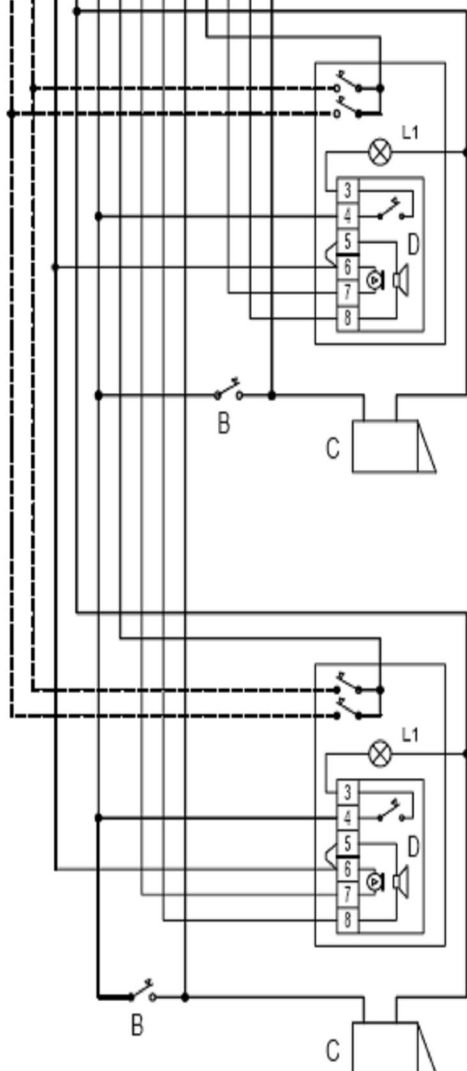

A



A



# ELVOX 836 PSU with 2 Entrance Panels

