

# Entrotech ED4



## Terminals

DR	White/Blue
VT	Blue/White
0V	White/Orange
BZ	Orange/White
S2	White/Green
S1	Green/White
DS	White/Brown
EX	To Ext Sounder or Beacon only

### **IMPORTANT NOTE :**

1) Before replacing the handset make note of the wires to each terminal on the existing unit (an easy way is to cut each core off leaving a piece of the insulation in place with colour visible) twist unused cores together (so you know they are not used, do not short them out).


2) Some older systems will have cable with one coloured core and a solid white core in this case mark each core with a marker or tape.

3) Some systems may have loop on wiring, you will have 2 cables into your handset (make sure any joins remain, as these may be serving other flats on the system).

# WIRING DIAGRAM

## ED4 Instructions and Wiring Colours


### ED4 Handset Fitting Instructions

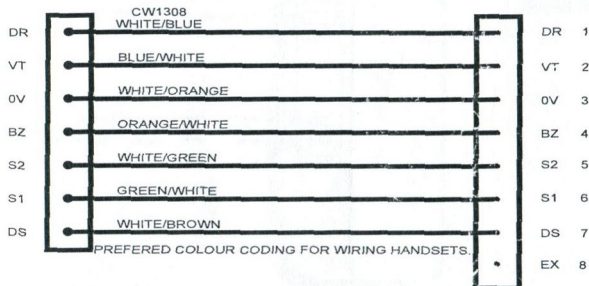

**NOTE: Terminal 8 (EX) must only be connected to an extension sounder or flashing beacon**

Privacy Timer Jumper Links			
1 = Link In, 0 = Link Out			
1	2	3	
1	1	1	0 = 5 Mins
1	0	0	1 = 15 Mins
0	0	0	0 = 30 Mins
0	1	0	1 = 1 Hour
1	0	0	0 = 2 Hours
1	0	1	1 = 4 Hours
1	1	0	0 = 6 Hours
1	1	1	1 = 8 Hours

### ED4 Handset Operating Instructions

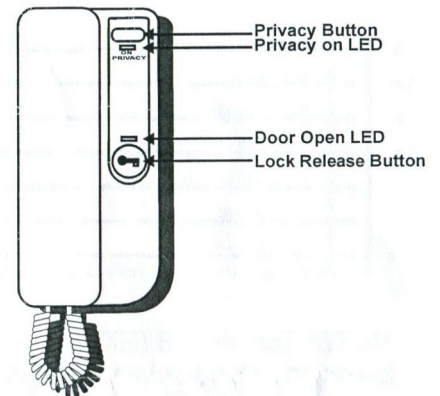

- 1) When called, the telephone will give a distinctive pulsing tone. Lift the handset to speak with the caller (if the call is not answered, the system will reset to allow other visitors to make a call).
- 2) To let the caller gain access, press the lock release button to open the door.
- 3) When you have completed the call, replace the handset to reset the system.

#### PRIVACY BUTTON

If you do not wish to be disturbed, press the privacy button. The LED will illuminate when in privacy mode and the call tone is muted.

Press the privacy button again to cancel privacy mode.

There is also a built in timer that automatically cancels privacy mode.