Bticino 334202 (5 Wire)







Terminals

- 20 Floor Call
- 1 Common 0V
- 3 Audio
- 4 Audio
- 5 Call
- 6 Lock

IMPORTANT NOTE :


1) Before replacing the handset make note of the wires to each terminal on the existing unit (an easy way is to cut each core off leaving a piece of the insulation in place with colour visible) twist unused cores together (so you know they are not used, <u>do not</u> short them out).


2) Some older systems will have cable with one coloured core and a solid white core in this case mark each core with a marker or tape.

3) Some systems may have loop on wiring, you will have 2 cables into your handset (make sure any joins remain, as these may be serving other flats on the system).


© 2013 www.interfoni.rs

Wiring Diagrams

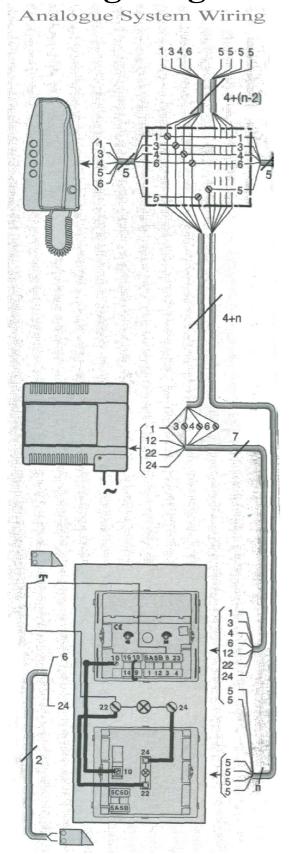

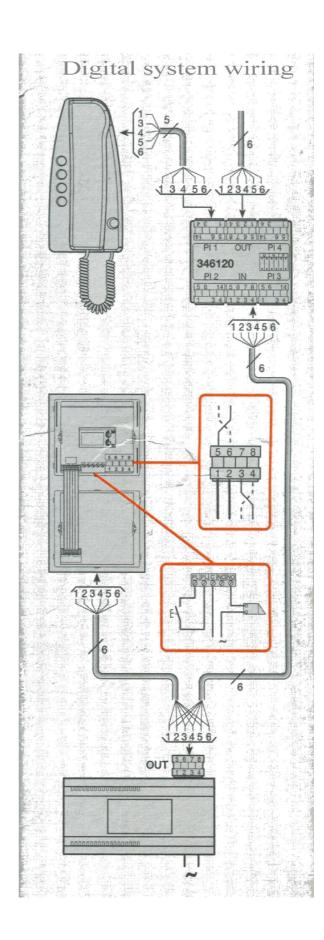



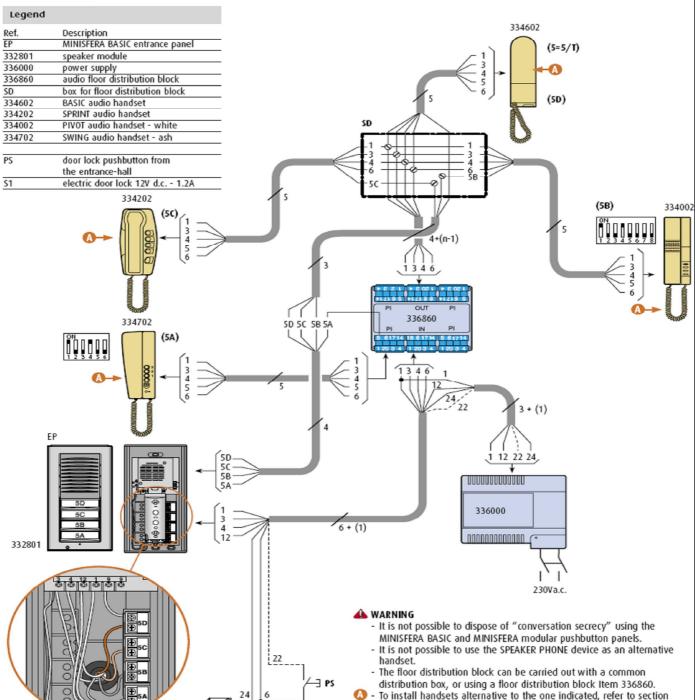

00

S1 🛛

To install handsets alternative to the one indicated, refer to section "HANDSET VERSIONS".