


Golmar T-710R Platea Universal

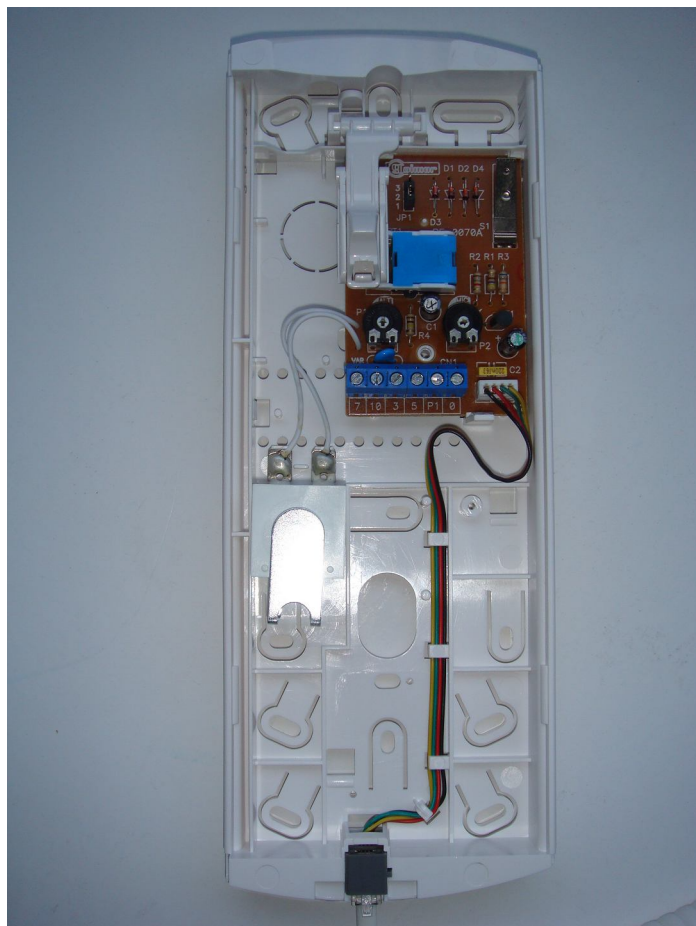

Terminals

- P1 Lock
- 5 Speech Out (Mic)
- 3 Common
- 10 Speech In (Speaker)
- 0 Call

P2 Privacy switch on this model

IMPORTANT NOTE :

- 1) Before replacing the handset make note of the wires to each terminal on the existing unit (an easy way is to cut each core off leaving a piece of the insulation in place with colour visible) twist unused cores together (so you know they are not used, do not short them out).
- 2) Some older systems will have cable with one coloured core and a solid white core in this case mark each core with a marker or tape.
- 3) Some systems may have loop on wiring, you will have 2 cables into your handset (make sure any joins remain, as these may be serving other flats on the system).

Handset Compatibility Chart for use with Golmar Universal Handsets

Handset	Lock	Mic.	Comm.	Speaker	Buzzer	Tone
Golmar Universal T-710R	P1	5	3	10	7	0
Golmar Universal T-910R	P1	5	3	10	7	0
Acet	5	10	2	7	9	
Auta	10	3	4	7	12	
Bpt	2	1	4	5	3	
BSTL	Z	R	O	T	I	
Centramatic	4	2	1	3	5	
Comelit	5	2	4	3	1	
Comelit VOX2000	P1	3	4	2	Zoemer	
Elvox	2	6	9	4	+	
Entryphone	3	P	B.F.G	L	A	
Farfisa	5	1	3	2	6	
Fermax Gondola	4	1	3	2	Vo5	
Fermax TF-1Z	1	2	3	6	4	
Fermax TN-1 *	1	2	3	6		4
Fermax TN-Z	1	2	3	6	4	
Golmar M-500	4	5	3	10	7	
Golmar T-600	T	1	3	2	6	
Golmar T-800	P1	5	3	10		0
Golmar T-810	P1	5	3	10	7	
Golmar T-810R	P1	5	3	10	7	0
Golmar T-900	P1	5	3	10		0
Golmar T-910	P1	5	3	10	7	
Golmar T-1000	X	M	A	5	N	
Golmar T-1000A	11	5	3	10	12	
Golmar T-2800	4	5	3	10	7	
Golmar T-2802	4	5	3	10	7	
LT Terraneo	T1	1	3	2	6	
Selti	5	1	3	2	6	
Siedle	1	2	9/C	11	7	
STR NH200/205	I	M	O	T	S	
Techniphone	5	1	3	2	V	
Tegui GL	3	4	2	5	1	
Tegui Horizon Z	3	4	2	5	1	
Tegui Horizon E	3	4	2	5		1
Urmet	9	2	6	1		CA
Urmet	8/9	2	11	1	7	
Videx	5	1	3/7	2	6	

* Fermax TN-1 Set JP1 jumper between 2 and 3. Do not change JP1 position for other models

Wiring Diagram

