Tegui T-71E (Series 7)



Terminals


- 1E Call (Electronic)
- 2 Common
- 3 Lock
- 4 Speech Out (Mic)
- 5 Speech In (Speaker)
- P Aux Button
- P Aux Button

IMPORTANT NOTE:

- 1) Before replacing the handset make note of the wires to each terminal on the existing unit (an easy way is to cut each core off leaving a piece of the insulation in place with colour visible) twist unused cores together (so you know they are not used, <u>do not</u> short them out).
- 2) Some older systems will have cable with one coloured core and a solid white core in this case mark each core with a marker or tape.
- 3) Some systems may have <u>loop on wiring</u>, you will have 2 cables into your handset (make sure any joins remain, as these may be serving other flats on the system).


© 2010 www.intercomsrus.com

WIRING DIAGRAM

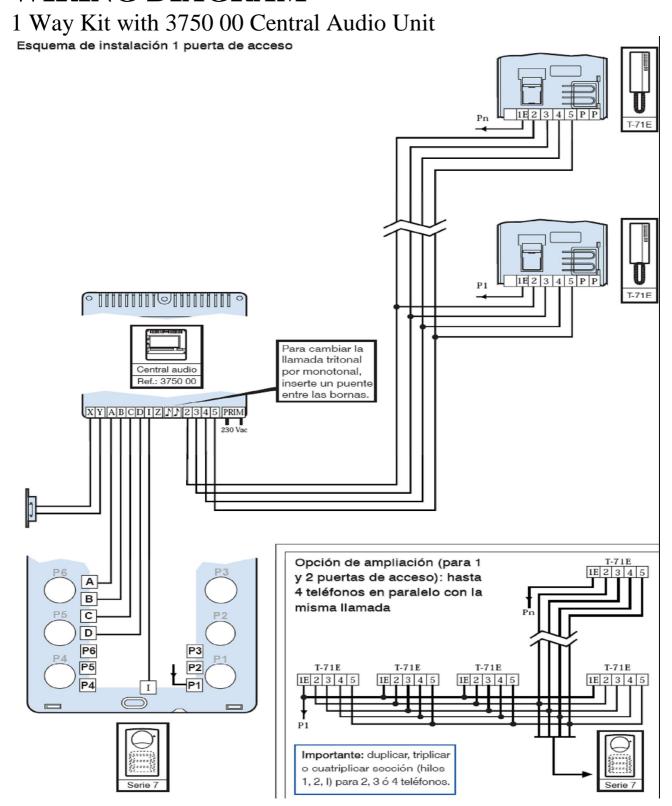

WIRING DIAGRAM

2 Entrance Kit with switcher and 3750 00 Central Audio Unit

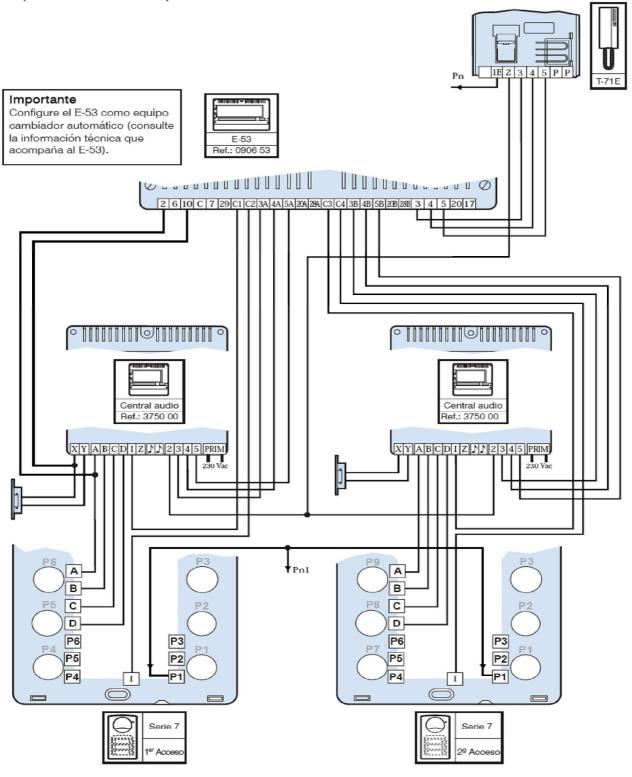

WIRING DIAGRAM

Audio Kit with 090021 front entrance panel

Para llamada electrónica Seleccione en el grupo fónico el tipo de llamada: Tritonal Monotonal Para llamada zumbador EGF-21: conecte Borna 19 en lugar de 20 T-71Z: conecte Borna 1Z en lugar de 1E T-71E 1Z 1E 2 3 4 5 P LL1 TEGUI TEGUI E-34 090021 2 6 10 PRIM, 220 Vac **a** LL1 **⊕**